

# REMOTE METER\*\*


Morningstar's **Remote Meter** (**RM-1**) is a universal, four digit display with custom icons that is compatible with several Morningstar controllers and inverters. This meter provides comprehensive system information for easy monitoring including voltage, current and temperature.



### **Key Features and Benefits:**

### Provides Important Information

The digital meter displays voltage, current, temperature, logged data, settings, alarms and error reporting for easy troubleshooting. Present, cumulative and maximums/minimums are indicated. The LED's display battery level and operating state.

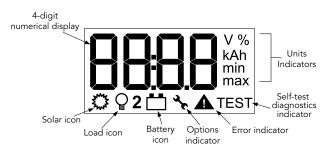

One or more icon and units indicators are displayed to indicate whether the numerical information relates to solar, load, battery 1 or 2, options, errors or self-test.

# Mounting Options



In Wall Mount



Frame Mount

### Easy to Install

Simply plugs into other Morningstar products via RJ-11 connector. May be mounted in the wall or on the wall using the included frame. Also includes 10 meters of wiring with RJ-11 connectors and mounting screws.

### Simple to Use

Three soft buttons allow for simple navigation of the meter menus. Custom icons and back lighting make the meter easy to read and understand.

# Low Self-Consumption

The Remote Meter was designed for low self-consumption to avoid draining the system batteries on even small solar systems. Self-consumption is 6 mA with backlight off and 15 mA with backlight on.

# Adjustability

The temperature may be displayed in either °C or °F, the backlight timer may be adjusted for desired running time and the amp-hours and minimum/maximum values may be reset.



**Back View** 

# REMOTE METER™

Meter Displays Solar:	SunSaverDuo Controller	SunSaver MPPT Controller	SureSine Inverter
Voltage		<b>✓</b>	
Current	<b>✓</b>		
Amp-Hours	<b>✓</b>		
Maximum Current	<b>✓</b>		
Battery:			
Voltage	<b>√</b> *	<b>✓</b>	<b>✓</b>
Minimum Voltage	<b>√</b> *	<b>✓</b>	<b>✓</b>
Maximum Voltage	<b>√</b> *	<b>✓</b>	<b>✓</b>
Current		<b>✓</b>	
Amp-Hours	<b>√</b> *	<b>✓</b>	
Watts		<b>✓</b>	
Load:			
Status (On / Off)		<b>✓</b>	<b>✓</b>
Current		<b>✓</b>	
Amp-Hours		<b>✓</b>	
Temperature (°C or °F):			
At Meter	✓	<b>✓</b>	<b>✓</b>
At Battery	<b>✓</b> **	<b>√</b> **	
Other Features:			
Errors and Alarms	<b>✓</b>	<b>✓</b>	<b>✓</b>
Data Logging	none	30 DAYS	none

<sup>\*</sup>for both Battery 1 and Battery 2

# TECHNICAL SPECIFICATIONS

### **Electrical**

Self-consumption:
 Backlight off

**Backlight off** 6 mA **Backlight on** 15 mA

Minimum OperatingVoltage 8 V

#### Mechanical

• Connector type RJ-11 (6 pin)

Faceplate dimensions
 Faceplate material
 Meter back dimensions
 9.5 x 9.5 cm / 3.8 x 3.8 in.
 Powder coated steel
 7.4 cm / 2.9 in. diameter

2.8 cm / 1.1 in. deep Fits 7.6 cm / 3 in. round hole

• Frame dimensions 11.4 x 11.4 x 3.5 cm

4.5 x 4.5 x 1.4 in.

• Frame material PBT pastic

• Meter cable 10 m / 33 ft (6 conductor)

May be extended to 30 m / 100 ft

Meter cable temp. rating
 Meter weight
 60 °C / 140 °F
 135 q / 0.3 lbs

### **Environmental**

• Ambient Temperature -20 °C to +60 °C

–4 °F to +140 °F –30 °C to +80 °C

• Humidity 100% N.C.

Printed circuit board is conformal coated

### **Certifications**

- CE Compliant
- RoHS Compliant
- Manufactured in a certified ISO 9001 facility

### Compatibility

- SunSaver Duo controller
- SunSaver MPPT controller
- SureSine inverter

The Remote Meter is available in a package with certain Morningstar products and is also sold separately.

WARRANTY: Five year warranty period. Contact Morningstar or your authorized distributor for complete terms.

**AUTHORIZED MORNINGSTAR DISTRIBUTOR:** 



1098 Washington Crossing Road Washington Crossing, PA 18977 USA Tel: +1 215-321-4457 Fax: +1 215-321-4458 E-mail: info@morningstarcorp.com Website: www.morningstarcorp.com

<sup>\*\*</sup>when using remote temp sensor