

INSTALLATION MAP

↑ To Sheet / A la hoja de: _____

| | | | | | | | | | |
|-----------------------------------|---|-------------------|---|---|-----------------------|---|---|------------------------|---|
| Panel Group/Grupo de los paneles: | | Customer/Cliente: | | | Installer/Instalador: | | | N S E W N S E O | |
| Azimuth/Azimet: | | | | | | | | | |
| Tilt/Inclinación: | | | | | | | | | |
| Sheet/Hoja ____ of/de ____ | | | | | | | | | |
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| A | | | | | | | | | |
| B | | | | | | | | | |
| C | | | | | | | | | |
| D | | | | | | | | | |
| E | | | | | | | | | |
| F | | | | | | | | | |
| G | | | | | | | | | |
| H | | | | | | | | | |
| J | | | | | | | | | |
| K | | | | | | | | | |
| L | | | | | | | | | |
| M | | | | | | | | | |

← To Sheet / A la hoja de: _____

↓ To Sheet / A la hoja de: _____

Scan completed map and upload it to Enphase. Click Add a New System at <https://enlighten.enphaseenergy.com>
 Use this map to build the virtual array in Array Builder.

Escanee el mapa completo y cárguelo en Enphase. Haga clic en Añadir nuevo sistema en <https://enlighten.enphaseenergy.com>
 Utilice este mapa para crear el conjunto de paneles virtual en el Creador de conjuntos de paneles de Enlighten.

Gateway Serial Number Label /
 Número de serie de Gateway



© 2023 Enphase Energy. All rights reserved. Enphase, the e and CC logos, IQ, and certain other marks listed at <https://enphase.com/trademark-usage-guidelines> are trademarks of Enphase Energy, Inc. in the US and other countries. Data subject to change. Rev04-2023-09-19

↓ To Sheet / A la hoja de: _____

Enphase Support: enphase.com/en-us/support/contact

QUICK INSTALL GUIDE



Install the Enphase IQ7, IQ7+, IQ7A, and IQ7X Microinverter

To install Enphase IQ Series Microinverters, read and follow all warnings and instructions in this guide and the *Enphase IQ7, IQ7+, and IQ7X Microinverter Installation and Operation Manual* at enphase.com/support. Safety warnings are listed at the end of this guide.

The Enphase microinverter models listed in this guide do not require grounding electrode conductors (GEC), equipment grounding conductors (EGC), or grounded conductors (neutral). The microinverter has a Class II double-insulated rating, which includes ground fault protection (GFP). To support GFP, use only PV modules equipped with DC cables labeled "PV Wire" or "PV Cable".

IMPORTANT: The Enphase IQ Series Microinverters include AC and DC connectors integrated into the bulkhead. The AC port connects to an IQ Cable or IQ Field Wireable Connector. IQ7 Microinverter Series has IQ DC bulkhead for DC connection and Q-DCC-2 bulkhead adapter cable for MC4 connection. UL has evaluated the MC4 connector for intermatibility with Stäubli MC4 connectors, whose cable coupler models are "PV-KST4/...-UR, PV-KBT4/...-UR, PV-KBT4-EV02/...-UR, and PV-KST4-EV02/...-UR".

NOTE: The installer must check the manufacturing date of the products to ensure that the installation date is within one year of the manufactured date of the products. Contact your local distributor to validate the date code.

PREPARATION

A) Install the Enphase Installer App and open it to log in to your Enphase account. With this app, you can scan microinverter serial numbers and connect to the IQ Gateway to track system installation progress. To download, go to enphase.com/installerapp or scan the QR code.



B) Refer to the following table and check PV module electrical compatibility at enphase.com/en-us/support/module-compatibility.

| Model | DC connector | PV module* cell count |
|-----------------|--------------|--|
| IQ7-60-2-US | Stäubli MC4 | Pair with 60-cell/120-half-cell modules |
| IQ7Plus-72-2-US | Stäubli MC4 | Pair with 60-cell/120-half-cell, 66-cell/132-half-cell, or 72-cell/144-half-cell |
| IQ7A-72-2-US | Stäubli MC4 | Pair with 60-cell/120-half-cell, 66-cell/132-half-cell, or 72-cell/144-half-cell |
| IQ7X-96-2-US | Stäubli MC4 | Pair only with 96-cell modules |

* Enphase IQ Series Microinverters are compatible with bifacial PV modules if the temperature-adjusted electrical parameters (maximum power, voltage, and current) of the modules, considering the front side electrical parameters (i.e., 0% back side gain), are within the allowable microinverter input parameters range.

C) In addition to the Enphase microinverters, PV modules, and racking, you will need the following Enphase items:

- IQ Gateway (model ENV-IQ-AM1-240) communications gateway or IQ Combiner (check enphase.com for models); To monitor solar production.
- Tie wraps or cable clips (Q-CLIP-100)
- IQ Sealing Caps (Q-SEAL-10); For any unused connectors on the IQ Cable
- IQ Terminator (Q-TERM-10): One required at the end of each AC cable segment
- IQ Disconnect Tool (Q-DISC-10)
- IQ Cable

| Cable model | Connector spacing* | PV module orientation | Connectors per box |
|-------------|--------------------|---------------------------------|--------------------|
| Q-12-10-240 | 1.3 m | Portrait (all) | 240 |
| Q-12-17-240 | 2.0 m | Landscape (60-cell and 96-cell) | 240 |
| Q-12-20-200 | 2.3 m | Landscape (72-cell) | 200 |

*Allows for 30 cm of cable slack.


- D) Ensure that you have the following items:
- AC junction box.
 - Tools: Screwdrivers, wire cutter, voltmeter, torque wrench, sockets, and wrenches for mounting hardware.
- E) Protect your system with lightning and surge suppression devices. It is also important to have insurance that protects against lightning and electrical surges.
- F) Plan your AC branch circuits to meet the following limits for the maximum number of microinverters per branch when protected with a 20 A over-current protection device (OCPD).

| Maximum* number of IQ Microinverters per AC branch circuit - single-phase | | | | |
|---|-----------|-----------|-----------|-----------|
| 240 V | IQ7 | IQ7+ | IQ7A | IQ7X |
| | 16 | 13 | 11 | 12 |
| 208 V | IQ7 | IQ7+ | IQ7A | IQ7X |
| | 13 | 11 | 11 | 10 |

* Limits may vary. Refer to the local requirements to define the number of microinverters per branch in your area.

G) Size the AC wire gauge to account for voltage rise. Select the wire size based on the distance from the beginning of the IQ Cable to the breaker in the load center. Design for a voltage rise of less than 2% for these sections. For details, refer to the Voltage Rise Technical Brief at enphase.com/support.


Best practice: Center-feed the branch circuit to minimize voltage rise in a fully-populated branch.

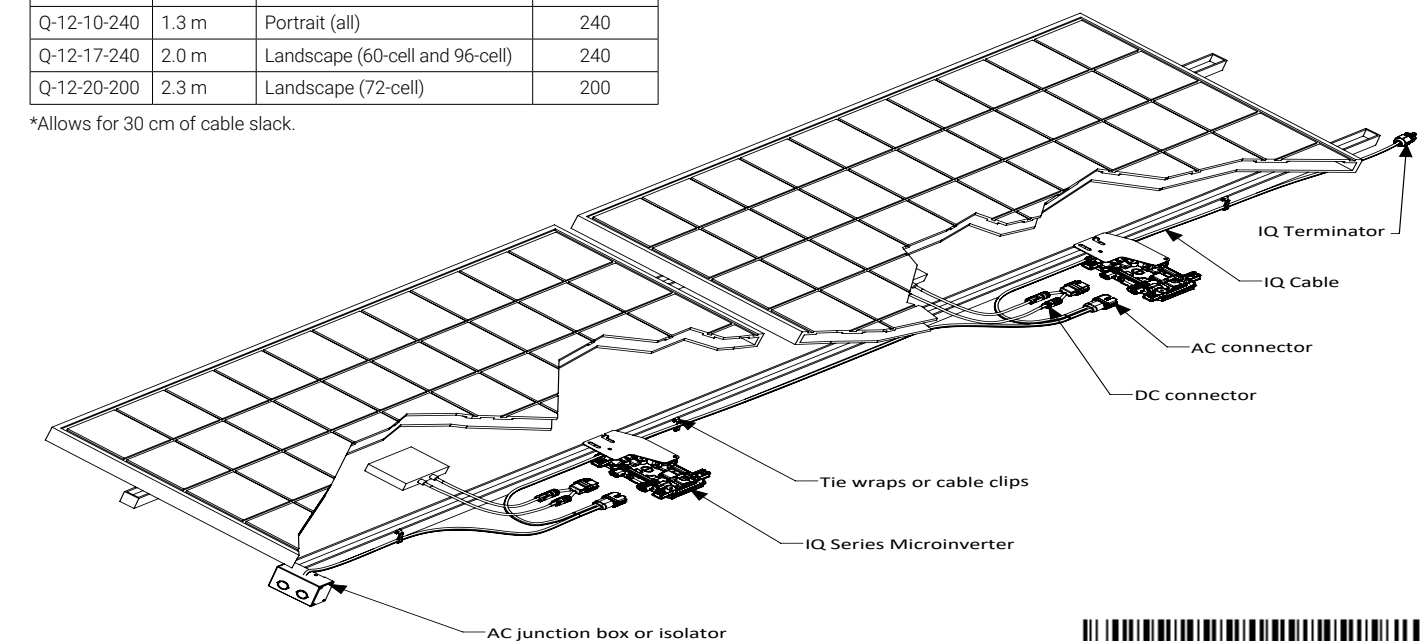

INSTALLATION

1 Position the IQ Cable

- Plan each cable segment to allow connectors on the IQ Cable to align with each PV module. Allow extra length for slack, cable turns, and any obstructions.
- Mark the approximate centers of each PV module on the PV racking.
- Layout the cabling along the installed racking for the AC branch circuit.
- Cut each section of cable to meet your planned needs.

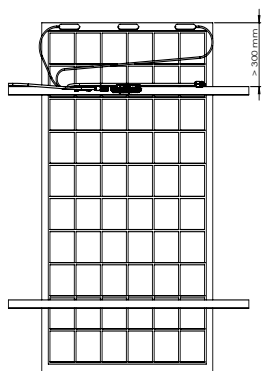

WARNING: When transitioning between rows, secure the cable to the rail to prevent cable or connector damage. Do not count on the connector to withstand tension.

2 Position the junction box

- Verify that the AC voltage at the site is within the range:

| Service type and voltage: L1 - L2 | |
|-----------------------------------|----------------|
| 240 V single-phase | 211 to 264 VAC |
| 208 V single-phase | 183 to 229 VAC |

- Install a junction box at a suitable location on the racking.
- Provide an AC connection from the junction box back to the electricity network connection using equipment and practices as required by local jurisdictions.


3 Mount the microinverters

- The microinverters can be mounted beneath the modules in either horizontal or vertical orientation to the module. They must be mandatorily protected from direct exposure to rain, UV, and other harmful weather events. Refer to the following image for clearance requirements during vertical mounting.
- Mount the microinverter horizontally, bracket side up or vertically. Always place it under the PV module, protected from direct exposure to rain, sun, and other harmful weather events. Allow a minimum of 1.9 cm (3/4 in) between the roof and the microinverter. Also, allow 1.3 cm (1/2 in) between the back of the PV module and the top of the microinverter. For vertical mount, also maintain > 30 cm (12 in) clearance from the edges of the PV module to protect the microinverter from direct exposure to rain, UV, and other harmful weather events.


WARNING: Install the microinverter under the PV module to avoid direct exposure to rain, UV, and other harmful weather events. Do not mount the microinverter upside down.

- Torque the mounting fasteners (1/4 in or 5/16 in) as follows. Do not over-torque.
 - 6 mm (1/4 in) mounting hardware: 5 N m (45 to 50 in-lbs).
 - 8 mm (5/16 in) mounting hardware: 9 N m (80 to 85 in-lbs).
 - When using UL 2703 mounting hardware, use the manufacturer's recommended torque value.

Horizontal mount:

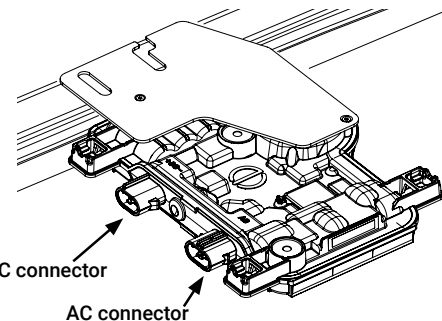


Vertical mount:

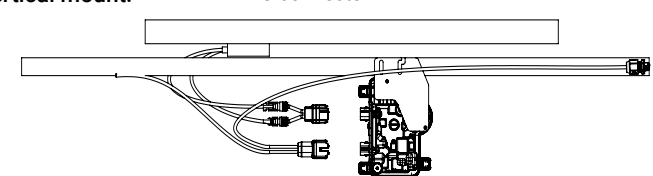

4 Create an installation map


Create a paper installation map to record microinverter serial numbers and positions in the array.

- Peel the removable serial number label from each microinverter and affix it to the respective location on the paper installation map.
- Peel the label from the IQ Gateway and affix it to the installation map.
- Always keep a copy of the installation map for your records.

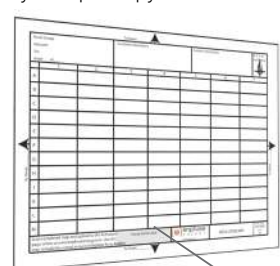


5 Manage the cabling

- Use cable clips or tie wraps to attach the cable to the racking. The cable must be supported at least every 1.8 m (6 ft).
- Dress any excess cabling in loops to avoid contacting the roof. Do not form loops smaller than 12 cm (4.75 in) in diameter.

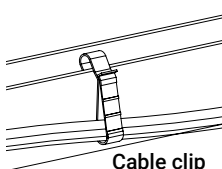

6 Connect the microinverters

- Connect the microinverter. Listen for a click as the connectors engage.
- Cover any unused connectors on the AC cable with IQ Sealing Caps. Listen for a click as the sealing caps engage.

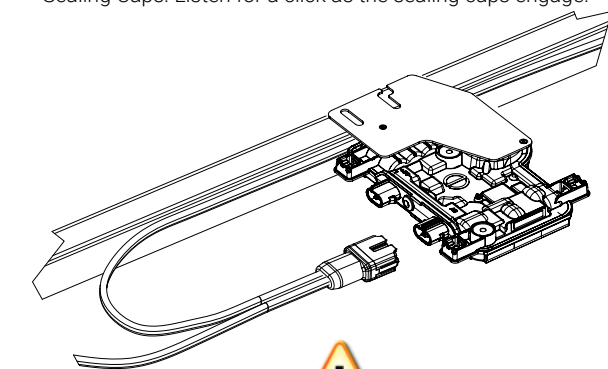


WARNING: Install sealing caps on all unused AC connectors as these connectors become live when the system is energized. Sealing caps are required for protection against moisture ingress.

To remove a sealing cap or AC connector, you must use an IQ Disconnect Tool.

7 Terminate the unused end of the cable

- Remove 13 mm (1/2 in) of the cable sheath from the conductors. Use the terminator body loop to measure.

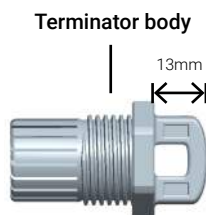

- Slide the hex nut onto the cable.
- Insert the cable into the terminator body so that each of the two wires lands on opposite sides of the internal separator. The grommet inside the terminator body must remain in place.
- Insert a screwdriver into the slot on the top of the terminator to hold it in place, and torque the nut to 7 N m.



- Hold the terminator body stationary with the screwdriver and turn only the hex nut to prevent the conductors from twisting out of the separator.



- Attach the terminated cable end to the PV racking with a cable clip or tie wrap so that the cable and terminator do not touch the roof.

WARNING: The terminator can not be re-used. If you unscrew the nut, you must discard the terminator.

8 Complete installation of the junction box


- Connect the IQ Cable to the junction box.
- Use the ground lug on the IQ Aggregator for module, rack, and balance of system grounding, if needed. The IQ Cable uses the following wiring color code:

| Wire colors |
|-------------|
| Black – L1 |
| Red – L2 |

9 Connect the PV modules

DANGER! Electric shock hazard. The DC conductors of this PV system are ungrounded and may be energized.

- If required, attach the Enphase DC bulkhead adapters to the microinverters. Ensure they are fully secured. **Do not reverse the adapter connections.**
- Connect the DC leads of each PV module to the DC input connectors or adapters of the microinverter.
- Check the LED on the connector side of the microinverter. The LED glows six times when DC power is applied.
- Mount the PV modules above the microinverters.

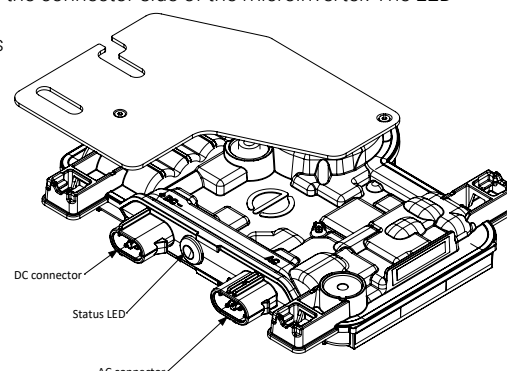

10 Energize the system

- Turn ON the AC disconnect or circuit breaker for the branch circuit.
- Turn ON the main utility-grid AC circuit breaker. Your system will start producing power after a five-minute wait time.
- Check the LED on the connector side of the microinverter:

| LED | Indicates |
|-----------------|--|
| Flashing green | Normal operation. AC grid function is normal and there is communication with the IQ Gateway. |
| Flashing orange | The AC grid is normal, but there is no communication with the IQ Gateway. |
| Flashing red | The AC grid is either not present or not within specification. |
| Solid red | There is an active "DC Resistance Low, Power Off" condition. To reset, refer to the IQ Gateway Installation and Operation Manual at: http://www.enphase.com/support . |

ACTIVATE MONITORING AND CONTROLS

After installing the microinverters, follow the procedures in the *IQ Gateway Quick Install Guide* to activate system monitoring, set up grid management functions, and complete the installation.

- Connect the IQ Gateway
- Detect devices
- Connect to the Enphase App
- Register the system
- Build the virtual array

ENPHASE CONNECTOR RATINGS

Enphase connectors on the cable assemblies in the following table have a maximum current of 20 A, a maximum OCPD of 20 A, and the maximum ambient temperature of -40°C to 79°C (-40°F to 174.2°F) and are rated for disconnection under load.

| Part number | Model | Maximum voltage |
|-------------|-------------|-----------------|
| 840-00387 | Q-12-10-240 | 250 VAC |
| 840-00388 | Q-12-17-240 | 250 VAC |
| 840-00389 | Q-12-20-200 | 250 VAC |
| 840-00385 | Q-DCC-2 | 100 VDC |
| 840-00386 | Q-DCC-5 | 100 VDC |

PV rapid shutdown equipment (PVRSE)

This product is UL Listed as PV rapid shutdown equipment and conforms with NEC 2014 and NEC 2017 section 690.12 and C22.1-2015 Rule 64-218 rapid shutdown of PV systems, for AC and DC conductors, when installed according to the following requirements:

- Microinverters and all the DC connections must be installed inside the array boundary. **Enphase further requires that the microinverters and the DC connections be installed under the PV module to avoid direct exposure to rain, UV, and other harmful weather events.**
- The array boundary is defined as 305 mm (1 ft) from the array in all directions or 1 m (3 ft) from the point of entry inside a building.

This rapid shutdown system must be provided with an initiating device and (or with) a status indicator, which must be installed in a location accessible to first responders or be connected to an automatic system that initiates rapid shutdown upon the activation of a system disconnect or activation of another type of emergency system.

The initiator shall be listed and identified as a disconnecting, which indicates whether it is in the "off" or "on" position. Examples are:

- Service disconnecting
- PV system disconnecting
- Readily accessible switch or circuit breaker

The handle position of a switch or circuit breaker is suitable for use as an indicator. Refer to NEC or CSA C22.1-2015 for more information.

Additionally, in a prominent location near the initiator device, a placard or label must be provided with a permanent marking including the following wording: "PHOTOVOLTAIC SYSTEM EQUIPPED WITH RAPID SHUTDOWN" The term "PHOTOVOLTAIC" may be replaced with "PV". The placard, label, or directory shall be reflective, with all letters capitalized and having a minimum height of 9.5 mm (3/8 in) in white on a red background.

SAFETY

IMPORTANT SAFETY INSTRUCTIONS SAVE THIS INFORMATION. This guide contains important instructions to follow during the installation of the IQ7, IQ7+, IQ7A, and IQ7X microinverters.

| | |
|--|---|
| | WARNING: Hot surface. |
| | WARNING: Refer to safety instructions. |
| | DANGER: Risk of electric shock. |
| | Refer to the manual |
| | Double insulated |

| Safety symbols | |
|----------------|--|
| | DANGER: Indicates a hazardous situation, which, if not avoided, will result in death or serious injury. |
| | WARNING: Indicates a situation where failure to follow instructions may be a safety hazard or cause equipment malfunction. Use extreme caution and follow instructions carefully. |
| | WARNING: Indicates a situation where failure to follow instructions may result in burn injury. |
| | NOTE: Indicates information particularly important for optimal system operation. |

| General safety | |
|----------------|---|
| | DANGER: Risk of electric shock. Do not use Enphase equipment in a manner not specified by the manufacturer. Doing so may cause death or injury to persons, or damage to equipment. |
| | DANGER: Risk of electric shock. Be aware that installation of this equipment includes risk of electric shock. |
| | DANGER: Risk of electric shock. The DC conductors of this photovoltaic system are ungrounded and may be energized. |
| | DANGER: Risk of electric shock. Always de-energize the AC branch circuit before servicing. Never disconnect the DC connectors under load. |
| | DANGER: Risk of electric shock. Risk of fire. Only use electrical system components approved for wet locations. |
| | DANGER: Risk of electric shock. Risk of fire. Only qualified personnel should troubleshoot, install, or replace Enphase microinverters or the IQ Cable and accessories. |
| | DANGER: Risk of electric shock. Risk of fire. Ensure that all AC and DC wiring is correct and that none of the AC or DC wires are pinched or damaged. Ensure that all AC junction boxes are properly closed. |

| General safety, continued | |
|---------------------------|---|
| | DANGER: Risk of electric shock. Risk of fire. Do not exceed the maximum number of microinverters in an AC branch circuit as listed in this guide. You must protect each microinverter AC branch circuit with a 20 A maximum breaker or fuse, as appropriate. |
| | DANGER: Risk of electric shock. Risk of fire. Only qualified personnel may connect the Enphase microinverter to the utility grid. |
| | WARNING: Risk of equipment damage. Enphase male and female connectors must only be mated with the matching male/female connector. |
| | WARNING: Before installing or using the Enphase microinverter, read all instructions and cautionary markings in the technical description, on the Enphase microinverter system, and on the photovoltaic (PV) equipment. |
| | WARNING: Do not connect Enphase microinverters to the grid or energize the AC circuit(s) until you have completed all of the installation procedures and have received prior approval from the electrical utility company. |
| | WARNING: When the PV array is exposed to light, DC voltage is supplied to the PCE. |
| | NOTE: To ensure optimal reliability and to meet warranty requirements, install the Enphase microinverters and IQ Cable according to the instructions in this guide. |
| | NOTE: Provide support for the IQ Cable every 1.8 m (6 ft). |
| | NOTE: Perform all electrical installations in accordance with all applicable local electrical codes, such as the Canadian Electrical Code, Part 1 and NFPA 70 (NEC). |
| | NOTE: Protection against lightning and resulting voltage surge must be in accordance with local standards. |

| Microinverter safety | |
|----------------------|--|
| | DANGER: Risk of electric shock. Risk of fire. Do not attempt to repair the Enphase microinverter; it contains no user-serviceable parts. If it fails, contact Enphase customer service to obtain a return merchandise authorization (RMA) number and start the replacement process. Tampering with or opening the Enphase microinverter will void the warranty. |
| | DANGER: Risk of fire. The DC conductors of the PV module must be labeled "PV Wire" or "PV Cable" when paired with the Enphase microinverter. |
| | WARNING: You must match the DC operating voltage range of the PV module with the allowable input voltage range of the Enphase microinverter. |
| | WARNING: The maximum open circuit voltage of the PV module must not exceed the specified maximum input DC voltage of the Enphase microinverter. Refer to the Enphase compatibility calculator at: https://enphase.com/en-us/support/module-compatibility to verify PV module electrical compatibility with microinverter. Use IQ7 Series Microinverters only with compatible PV modules as per Enphase compatibility calculator. Using electrically incompatible PV module voids Enphase warranty. |

| DC cable safety | |
|-----------------|--|
| | NOTE: Ensure proper routing of PV module DC cable using the clips to prevent the leads from resting on the roof. Do not wrap extra DC cable around the microinverter. |
| | NOTE: Avoid direct exposure to sunlight. |
| | NOTE: Avoid sharp edges on racking. |
| | NOTE: Avoid cable touching rough surfaces or moving parts within the racking system. |
| | NOTE: Avoid overly tight bending radii. A minimum bend radii for the DC cable is eight times the outer diameter or R55 mm. |
| | NOTE: Avoid overly tightly sized cable clips for routing. |